

## Spares Module Assemblies

---



### Module 4: Handwheel

- 4A Handwheel assembly complete - worm gearing & hand wheel
- 4B Handwheel only
- 4B1 Anti-clockwise label and screws
- 4C Side handwheel maintenance kit, bearing, o-rings, seals etc.
- 4D Hand wheel spur box cover, plastic cover, o-ring, screws
- 4E Spindle cover tube

### Module 5: Motor

- 5A Motor assembly complete, stator/rotor, Motor cover, bearing, screws & o-ring
- 5B Motor maintenance kit, bearing, spring, screws & o-ring