

Section 7

ILLUSTRATIONS AND PARTS LIST

7.2 RECOMMENDED SPARE PARTS LIST (CONTINUED)

DESCRIPTION	KIT NUMBER	QUANTITY
repair kit for blowdown valve 250030-276	02250045-132	1
repair kit for solenoid valve 250038-674	250038-673	1
replacement kit for solenoid valve coil 250038-674	250031-738	1
repair kit for flexible gasket 040648 (Std.)	040649	2
repair kit for flexible gasket 250007-563 (KT)	250007-564	2
replacement kit for Sullicon Control	250020-353	1
Sullicon spring	250006-526	1
repair kit for v-type strainer 241771	241772	1
repair kit for shaft seal (12 Series 40 and 50HP)	02250050-363	1
repair kit for shaft seal (12 Series 60HP; 16 Series 60-100HP)	02250050-364	1
repair kit for shaft seal installation	602542-001	1
repair kit for combination separator/trap 250018-041	250033-038	1
fluid, SRF 1/4000 (Std. 12 Series; Std. 16 Series 60 and 75HP) (5 gallons)	250019-662	(I)
lubricant, Sullube 32 (Std. 16 Series 100HP) (5 gallons)	250022-669	(I)
lubricant, 24KT (5 gallons)	046850-001	(I)

(I) For proper amount of fluid fill, please consult [Lubrication Guide in Section 3, Specifications](#).

PLEASE NOTE: WHEN ORDERING PARTS, ALWAYS INDICATE SERIAL NUMBER OF COMPRESSOR.