

Section 7

## ILLUSTRATIONS AND PARTS LIST

---

### 7.2 RECOMMENDED SPARE PARTS LIST (CONTINUED)

DESCRIPTION	KIT NUMBER	QUANTITY
repair kit for blowdown valve 250030–276	02250045–132	1
repair kit for solenoid valve 250038–674	250038–673	1
replacement kit for solenoid valve coil 250038–674	250031–738	1
repair kit for flexible gasket 040648 (Std.)	040649	2
repair kit for flexible gasket 250007–563 (KT)	250007–564	2
replacement kit for Sullicon Control	250020–353	1
Sullicon spring	250006–526	1
repair kit for v–type strainer 241771	241772	1
repair kit for shaft seal (12 Series 40 and 50HP)	02250050–363	1
repair kit for shaft seal (12 Series 60HP; 16 Series 60–100HP)	02250050–364	1
repair kit for shaft seal installation	602542–001	1
repair kit for combination separator/trap 250018–041	250033–038	1
fluid, SRF 1/4000 (Std. 12 Series; Std. 16 Series 60 and 75HP) (5 gallons)	250019–662	(I)
lubricant, Sullube 32 (Std. 16 Series 100HP ) (5 gallons)	250022–669	(I)
lubricant, 24KT (5 gallons)	046850–001	(I)

(I) For proper amount of fluid fill, please consult [Lubrication Guide in Section 3, Specifications](#).

---

**PLEASE NOTE: WHEN ORDERING PARTS, ALWAYS INDICATE SERIAL NUMBER OF COMPRESSOR.**