

Pushbuttons/Selectors/Pilot Lights

AR22/DR22 and AR30/DR30

Accessories

Description	Type
Lens for illuminated pushbutton switch and pilot lights	Type Used with
	AR9C011 -□*1 AR22F0L, F5L, F0P, F5P
	AR9C012 -□*1 AR22E0L, E5L, E0P, E5P AR22G1L, G2L, G4L, G6L, G7L, G9L DR22E3L, E3P AR30E0L, E5L, G2L, G3L, G4L, G7L, G8L, G9L DR30E3L
	AR9C013 -□*1 AR22F0M, F5M
	AR9C014 -□*1 AR22E0M, E5M DR22E3M, F5M
	AR9C015 -□ AR22M4L, M4P
	AR9C016 -□ AR22M0L, M5L
	DR9C001 -□ DR22D0L DR30D0L*2
	DR9C002 -□ DR22K0L DR30K0L*2
	DR9C120-C DR30M4M
	DR9C121-C DR30F4N
	DR9C122-C DR30F4M
	DR9C126 -□*1 DR22F3M
	DR9C126-C DR22F4M
	DR9C127 -□*1 DR22E3N
Replace the □ mark by the lens color code	
Color	Green Red Clear Yellow
Code	G R C Y
Color	Orange Blue White
Code	A S W
Notes: *1 When the main unit code is "W" (white), use a lens of clear color. *2 Except for pilot lights with resistor	



AF94-458

Description	Type
Button for pushbutton switch	Type Used with
	AR9C001 -□ AR22F0R, F5R, F0Y, F5Y, G2R, G7R AR30F0R, F5R, FVR AR22S1R, S2R, S3R, S6R AR30S1R, S2R, S3R, S6R
	AR9C003 -□ AR22E0R, E5R, G0R, G3R, G5R, G8R AR22E0Y, E5Y AR30E0R, E5R, G0R, G1R, G5R, G6R
	AR9C004 -□ AR22F0S, F5S
	AR9C005 -□ AR22E0S, E5S
	AR9C006 -□ AR22M4R, M9R, M4Y AR30M4R
	AR9C007 -□ AR22M0R, M5R AR30M0R, M3R, M5R, M8R
	AR9C024 -□ AR30B0R, B1R, B2R, B3R
	AR9C027-C AR22FAR, FBR, AR30FAR, FBR
	AR9C028-C AR22EAR, EBR, AR30EAR, EBR
AR9C041-R AR30N0R	
AHX539-1 Cap for AR30FVR	
Replace the □ mark by the button color code	
Color	Green Red Black White
Code	G R B W
Color	Yellow Orange Blue
Code	Y A S



AF94-461

KK02-101A

KK02-102A

KK02-103A

Description	Type
Center button (For V type)	Type Used with
	AR9C020-R AR22V0R, V2R, VSR AR30V0R, V2R
	AR9C020 -□ AR22V5R, AR30V5R
	AR9C018-R AR22V0L, V2L, VDL, VAL, VSL AR30V0L, V2L
	AR9C018 -□ AR22V5L*, AR30V5L*
Replace the □ mark by the button color code	
Color	Red Black Yellow
Code	R B Y
Note: * V5L: Red and yellow only	



AF95-32

Description	Type
Push-lock, turn-reset button (V and Q types)	Type Used with
	AR9C008-R AR22V4R
	AR9C010-R AR22Q2R, AR30Q2R
	AR9C017-R AR22V2R, V2L, AR30V2R, V2L
	AR9C019-R AR22VAL
	AR9C021-R AR22V0R, V0L, AR30V0R, V0L
	AR9C021 -□ AR22V5R, V5L*, AR30V5R, V5L*
	AR9C026-R AR22VDL
	AR9C029-R AR30V1R
	AR9C040-R AR22VSR, VSL
Replace the □ mark by the button color code	
Color	Red Black Yellow
Code	R B Y
Note: * V5L: Red and yellow only	



AF95-31

KK02-104A

Description	Type
Knob	Type Used with
	AR9M006 -□ AR22PR, PCR, PY, PCY AR30PR, PCR
Replace the □ mark by the knob color code	
Color	Black Green Red
Code	B G R



AF95-43

Description	Type
Lever	Type Used with
	AR9M007 -□ AR22WR, WCR, WY, WCY AR30WR, WCR
Replace the □ mark by the lever color code	
Color	Black Green Red
Code	B G R



AF95-42

Description	Type
Cylindrical knob	Type Used with
	AR9M008 -□ AR22RR, RCR, RY, RCY
Replace the □ mark by the knob color code	
Color	Black Green Red
Code	B G R



AF95-44