



Version with coolable bearing bracket

Heatable version ("h" version)

Table 30: List of components

Part No.	Comprising	Description
102	102	Volute casing
	411.01/.02 <sup>21)</sup> /03 <sup>21)</sup> /.04 <sup>21)</sup> /.10 <sup>22)</sup>	Joint ring
	502.01 <sup>21)</sup>	Casing wear ring
	902.01	Stud
	903.01/.02 <sup>21)</sup> /.03 <sup>21)</sup> /.04 <sup>21)</sup>	Screw plug
	920.01	Hexagon nut
161	161	Casing cover
	502.02 <sup>21)</sup>	Casing wear ring
	901.22 <sup>23)</sup> /31	Hexagon head bolt
	902.02	Stud
	920.02	Hexagon nut
183	183	Support foot
210	210	Shaft
	920.21 <sup>24)</sup>	Slotted round nut
	931.01 <sup>24)</sup>	Lock washer
	940.01/.02/.09 <sup>25)</sup>	Key
230	230	Impeller
	503.01/.02 <sup>21)</sup>	Impeller wear ring
320.02 <sup>24)</sup>	320.02	Angular contact ball bearing (double-row in CS40)
321.01 <sup>26)</sup>	321.01	Deep groove ball bearing
321.02 <sup>26)</sup>	321.02	Deep groove ball bearing
322.01 <sup>24)</sup>	322.01	Cylindrical roller bearing
330	330	Bearing bracket
360.01	360.01	Bearing cover
360.02	360.02	Bearing cover
400.01	400.01	Gasket
400.02	400.02	Gasket
411.15 <sup>22)</sup>	411.15	Joint ring
411.31	411.31	Joint ring
411.32	411.32	Joint ring
421.01	421.01	Lip seal
421.02	421.02	Lip seal

<sup>21)</sup> Not on all versions

68 of 74

<sup>22)</sup> Joint rings 411.10 and 411.15 (411.15 for versions with mechanical seal with seal cover only) depending on the operating temperature. Order separately in spare parts order.

<sup>23)</sup> Only for clamped cover

<sup>24)</sup> Not fitted on versions with economy bearings

<sup>25)</sup> From CS 60

<sup>26)</sup> On versions with economy bearings only