

TABLE 11.2 Other reference drawings and documents

No.	Drawing No.	Drawing title
1	KU1-815-282	MPS280BH+SLK500 PULVERIZER ASSEMBLY
2	KU0-216-145	MPS-280BH MILL HOUSING
3	KU0-216-146	MPS-280BH BOTTOM HOUSING
4	KU0-216-147	MPS-280BH PYRITE BOX ASSEMBLY
5	KU0-216-148	MPS-280BH LOADING UNIT ASSEMBLY (1/2)
6	KU0-216-149	MPS-280BH LOADING UNIT ASSEMBLY (2/2)
7	KU0-216-150	MPS-280BH CLASSIFIER ASSEMBLY
8	KU0-216-151	MPS-280BH GAUGE CONNECTION ASSEMBLY
9	KU1-937-180	MPS-280BH ASSEMBLING OUTLINE AT SITE
10	KU1-937-181	MPS-280BH ASSEMBLY OF GEAR BOX MILL MOTOR & INCHING DRIVE
11	KU1-937-182	MPS-280BH GRINDING PART ASSEMBLY
12	KU1-937-183	MPS-280BH 48 PORT ROTARY THROAT SEGMENT ASSEMBLY
13	KU1-937-184	MPS-280BH YOKE GUARD
14	KU1-937-185	MPS-280BH AIR SEAL PIPE
15	KU1-937-186	MPS-280BH YOKE AIR SEAL ASSEMBLY
16	KU1-937-187	MPS-280BH PYRITE PLOW ASSEMBLY
17	KU1-937-189	MPS-280BH WASHING & FIRE EXTINGUISHING NOZZLE ASSEMBLY
18	KU1-937-194	MPS-280BH LOADING ROD SEAL AIR PIPE ASSEMBLY
19	KU1-937-195	MPS-280BH WATER INJECTION PIPE ASSEMBLY
20	KU1-937-197	MPS-280BH DRAWING OF SITE ASSEMBLING POINT (1/2)
21	KU1-937-198	MPS-280BH DRAWING OF SITE ASSEMBLING POINT (2/2)
22	KU2-506-259	MPS-280BH ROLL WHEEL SEAL AIR PIPE ASSEMBLY
23	KU2-506-260	MPS-280BH ROLL WHEEL ASSEMBLY
24	KU2-507-580	MPS-280BH COUPLING FOR PLANETARY GEAR BOX
25	KU2-507-270	DRAWING OF CERAMIC CAP INSTALLATION
26	KU1-851-163	PROCESS FOR DISASSEMBLY OF PULVERIZER (UNIT 5)
27	KU1-907-630	PROCESS FOR DISASSEMBLY OF PULVERIZER (UNIT 6)
28	ES-(XTJB)5,6-04-00-0065	Pulverizer clearing procedure after trip using a truck
29	-	Pulverizer 50hr inspection check sheet
30	-	Pulverizer 3000hr inspection check sheet