


Section 05 Roots Blower Instruction

Roots Blower List

NO.	KKS Code	Equipment Name	Qty.	Specification	Model	Motor Power	Remark
1	00GNC60AN001 00GNC60AN002	Air Scour Blower A/B	2	Q=30m <sup>3</sup> /min, P=0.5bar	MLG200b	45KW	Attachment 01

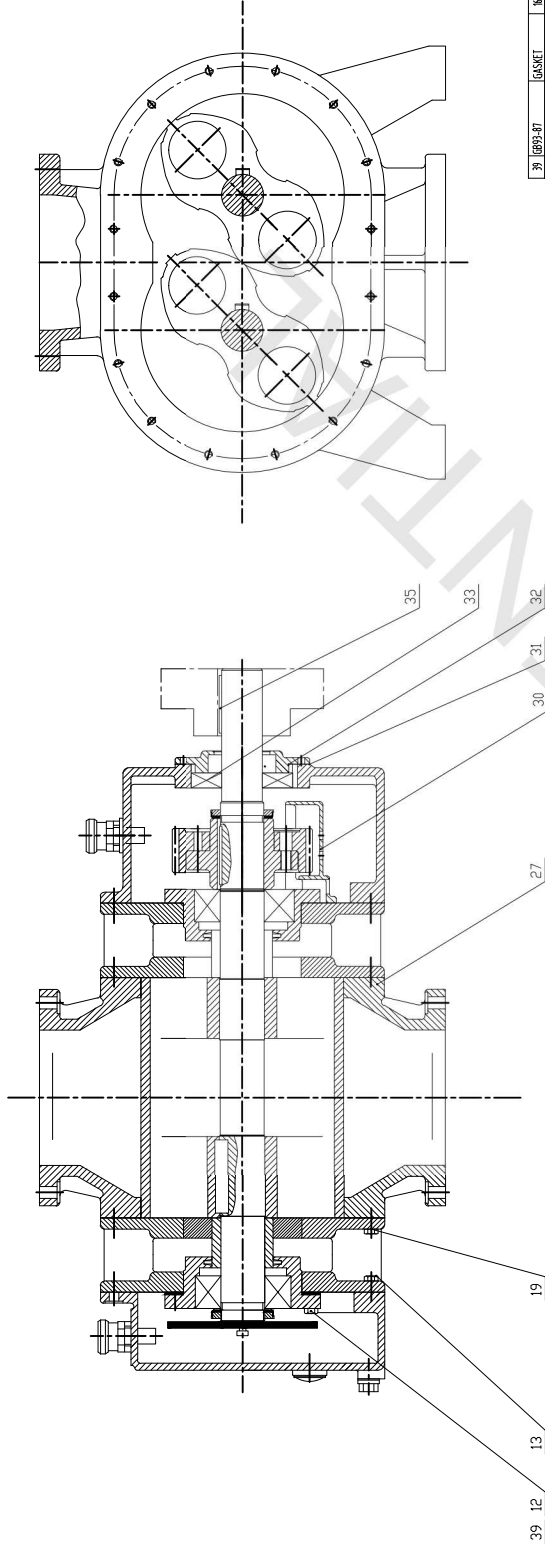

NO.	ITEM	NAME	QTY	MATERIAL	WEIGHT	REMARK
39	0593-87	GASKET	16	65Mn	0.03	0.002
38	3163-26	BEARING LINER	2	HT700	0.007	0.002
37	3163-11	GEAR BOX	1	HT700	5.57	0.002
36	0593-79	KEY	2	A5	0.11	0.27
35	0593-79	KEY	1	A5	0.14	0.41
34	3163-10	GEAR	1	HT700	23.71	0.274
33	3163-10	GEAR	1	HT700	23.71	0.274
32	3163-11	GEAR	1	HT700	23.71	0.274
31	3163-26	BEARING LINER	1	HT700	0.007	0.002
30	3163-26	BEARING LINER	1	HT700	0.007	0.002
29	3163-25	GEAR COVER	3	65Mn	0.48	0.48
28	0593-87	GASKET	8	65Mn	0.03	0.01
27	0593-86	BEARING LINER	2	HT700	0.02	0.11
26	0593-87	GASKET	1	HT700	0.04	0.13
25	3162-24	SEAL 2	2	HT700	0.09	0.38
24	3162-23	SEAL 1	4	HT700	0.17	0.68
23	3162-23	SEAL 1	4	HT700	0.17	0.68
22	3162-23	SEAL 1	4	HT700	0.17	0.68
21	3162-23	SEAL 1	4	HT700	0.17	0.68
20	3162-23	SEAL 1	4	HT700	0.17	0.68
19	0593-86	BEARING LINER	8	HT700	0.04	0.29
18	0593-86	BEARING LINER	24	HT700	0.05	1.1
17	3162-7	STRONG PLATE	2	HT700	0.05	0.17
16	0593-86	BEARING LINER	20	HT700	0.05	0.97
15	0593-86	BEARING LINER	20	HT700	0.05	0.97
14	0593-86	BEARING LINER	20	HT700	0.05	0.97
13	3162-22	BEARING TABLET	8	HT700	0.08	0.64
12	0593-86	BEARING LINER	8	HT700	0.02	0.29
11	3162-21	SEAL 1	2	HT700	0.02	0.19
10	3162-21	SEAL 1	2	HT700	0.02	0.19
9	0593-87	GASKET	2	65Mn	0.03	0.05
8	0593-86	BEARING LINER	2	HT700	0.01	0.03
7	0593-86	BEARING LINER	5	HT700	0.03	0.15
6	0593-86	BEARING LINER	5	HT700	0.03	0.15
5	0593-86	BEARING LINER	5	HT700	0.03	0.15
4	0593-86	BEARING LINER	5	HT700	0.03	0.15
3	3162-43	OIL FLINGER	1	HT700	1.05	1.08
2	3162-7	BEARING BASE	4	HT700	0.27	2.28
1	3162-1	MAIN FRAME	1	HT700	315.325	315.325

Uncontrolled when printed or downloaded. Verify that this is the correct version before use.  
 Reproduction of part or all the contents of the document is prohibited without written permission from PT. Bhumi Jepara Service

NO.	ITEM	NAME	QTY	MATERIAL	WEIGHT	REMARK
1	3162-1	MAIN FRAME	1	HT700	315.325	315.325
2	3162-7	BEARING BASE	4	HT700	0.27	2.28
3	3162-43	OIL FLINGER	1	HT700	1.05	1.08
4	0593-86	BEARING LINER	5	HT700	0.03	0.15
5	0593-86	BEARING LINER	5	HT700	0.03	0.15
6	0593-86	BEARING LINER	5	HT700	0.03	0.15
7	0593-86	BEARING LINER	5	HT700	0.03	0.15
8	0593-86	BEARING LINER	2	HT700	0.02	0.29
9	0593-87	GASKET	2	65Mn	0.03	0.05
10	3162-21	SEAL 1	2	HT700	0.02	0.19
11	3162-21	SEAL 1	2	HT700	0.02	0.19
12	0593-86	BEARING LINER	8	HT700	0.08	0.64
13	3162-22	BEARING TABLET	8	HT700	0.08	0.64
14	0593-86	BEARING LINER	20	HT700	0.05	0.97
15	0593-86	BEARING LINER	20	HT700	0.05	0.97
16	0593-86	BEARING LINER	20	HT700	0.05	0.97
17	3162-7	STRONG PLATE	2	HT700	0.05	0.17
18	0593-86	BEARING LINER	24	HT700	0.05	1.1
19	0593-86	BEARING LINER	8	HT700	0.04	0.29
20	3162-11	GEAR COVER	1	HT700	0.48	0.48
21	3162-23	SEAL 1	4	HT700	0.17	0.68
22	3162-23	SEAL 1	4	HT700	0.17	0.68
23	3162-23	SEAL 1	4	HT700	0.17	0.68
24	3162-23	SEAL 1	4	HT700	0.17	0.68
25	3162-23	SEAL 1	4	HT700	0.17	0.68
26	0593-87	GASKET	8	65Mn	0.03	0.11
27	0593-86	BEARING LINER	2	HT700	0.02	0.11
28	3163-25	GEAR COVER	3	65Mn	0.48	0.48
29	3163-26	BEARING LINER	1	HT700	0.007	0.002
30	3163-26	BEARING LINER	1	HT700	0.007	0.002
31	3163-11	GEAR BOX	1	HT700	5.57	0.002
32	3163-10	GEAR	1	HT700	23.71	0.274
33	3163-10	GEAR	1	HT700	23.71	0.274
34	3163-11	GEAR	1	HT700	23.71	0.274
35	0593-79	KEY	2	A5	0.11	0.27
36	0593-79	KEY	1	A5	0.14	0.41
37	3163-26	BEARING LINER	2	HT700	0.007	0.002
38	0593-87	GASKET	16	65Mn	0.03	0.002

NO.	ITEM	NAME	QTY	MATERIAL	WEIGHT	REMARK
1	3162-1	MAIN FRAME	1	HT700	315.325	315.325
2	3162-7	BEARING BASE	4	HT700	0.27	2.28
3	3162-43	OIL FLINGER	1	HT700	1.05	1.08
4	0593-86	BEARING LINER	5	HT700	0.03	0.15
5	0593-86	BEARING LINER	5	HT700	0.03	0.15
6	0593-86	BEARING LINER	5	HT700	0.03	0.15
7	0593-86	BEARING LINER	5	HT700	0.03	0.15
8	0593-86	BEARING LINER	2	HT700	0.02	0.29
9	0593-87	GASKET	2	65Mn	0.03	0.05
10	3162-21	SEAL 1	2	HT700	0.02	0.19
11	3162-21	SEAL 1	2	HT700	0.02	0.19
12	0593-86	BEARING LINER	8	HT700	0.08	0.64
13	3162-22	BEARING TABLET	8	HT700	0.08	0.64
14	0593-86	BEARING LINER	20	HT700	0.05	0.97
15	0593-86	BEARING LINER	20	HT700	0.05	0.97
16	0593-86	BEARING LINER	20	HT700	0.05	0.97
17	3162-7	STRONG PLATE	2	HT700	0.05	0.17
18	0593-86	BEARING LINER	24	HT700	0.05	1.1
19	0593-86	BEARING LINER	8	HT700	0.04	0.29
20	3162-11	GEAR COVER	1	HT700	0.48	0.48
21	3162-23	SEAL 1	4	HT700	0.17	0.68
22	3162-23	SEAL 1	4	HT700	0.17	0.68
23	3162-23	SEAL 1	4	HT700	0.17	0.68
24	3162-23	SEAL 1	4	HT700	0.17	0.68
25	3162-23	SEAL 1	4	HT700	0.17	0.68
26	0593-87	GASKET	8	65Mn	0.03	0.11
27	0593-86	BEARING LINER	2	HT700	0.02	0.11
28	3163-25	GEAR COVER	3	65Mn	0.48	0.48
29	3163-26	BEARING LINER	1	HT700	0.007	0.002
30	3163-26	BEARING LINER	1	HT700	0.007	0.002
31	3163-11	GEAR BOX	1	HT700	5.57	0.002
32	3163-10	GEAR	1	HT700	23.71	0.274
33	3163-10	GEAR	1	HT700	23.71	0.274
34	3163-11	GEAR	1	HT700	23.71	0.274
35	0593-79	KEY	2	A5	0.11	0.27
36	0593-79	KEY	1	A5	0.14	0.41
37	3163-26	BEARING LINER	2	HT700	0.007	0.002
38	0593-87	GASKET	16	65Mn	0.03	0.002

天美机械有限公司  
 罗发源风机  
 TUG008