

# Attachment 03

on 30 September 2024 11:22 | Tri Okta Ervina - ENG BJS

check valve

H44J/Fs -6/10/16

Instruction

CONFIDENTIAL

**The People's Republic of China**

TIANJIN JINGTONG CONTROL INSTRUMENT TECHNOLOGIES CO.,LTD.


- 1、 It is with upper body, lower body and disc and some other parts.
- 2、 When opening, the rubber disc is pushed away by the pressure derived from the medium stream flowing in the predetermined direction. When closing, the rubber disc is pressed on the body sealing surface by the pressure derived from the reversed medium stream.
- 3、 Parts and the structure as following:

部件列表:

1. 上阀体
2. 下阀体
3. 阀体衬里
4. 阀瓣

Component list :

1. Upper body
2. Lower body
3. Body lining
4. Disc

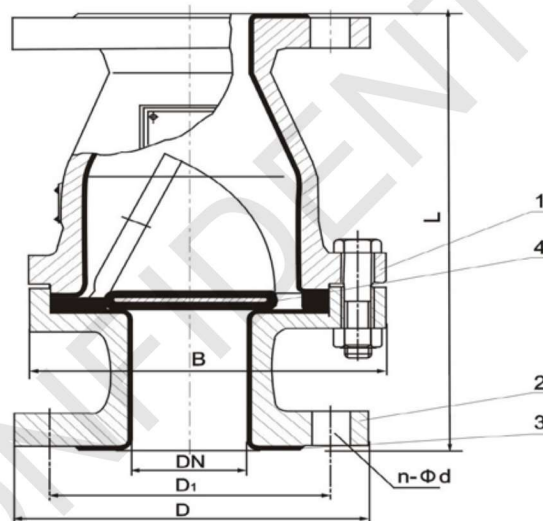

### III. Maintenance and installation attentions

1. Store the valve in a dry room and place them in order.
2. Sealed the both ends of the passages to prevent the sealing components being damaged by foreign substances entering.
3. It should be wiped for the machined metal surfaces and coated with antirust agent. ◦
4. Never coat any grease on the rubber lining prevent infecting its using age caused by lined layer swelling.
5. It is not allowed to bump the valve with other metals or hard substances when transporting or installing.
6. Before installing, check carefully the application range between the pipeline and valve. Prevent any unnecessary loss caused by improper valve selection