


Version with coolable bearing bracket

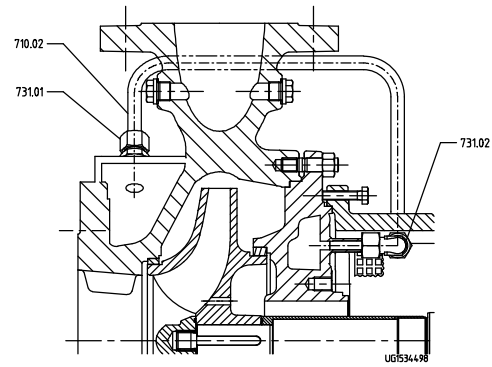

Heatable version ("h" version)

Table 30: List of components

Part No.	Comprising	Description
102	102	Volute casing
	411.01/.02 ²¹⁾ /03 ²¹⁾ /.04 ²¹⁾ /.10 ²²⁾	Joint ring
	502.01 ²¹⁾	Casing wear ring
	902.01	Stud
	903.01/.02 ²¹⁾ /.03 ²¹⁾ /.04 ²¹⁾	Screw plug
	920.01	Hexagon nut
161	161	Casing cover
	502.02 ²¹⁾	Casing wear ring
	901.22 ²³⁾ /31	Hexagon head bolt
	902.02	Stud
	920.02	Hexagon nut
183	183	Support foot
210	210	Shaft
	920.21 ²⁴⁾	Slotted round nut
	931.01 ²⁴⁾	Lock washer
	940.01/.02/.09 ²⁵⁾	Key
230	230	Impeller
	503.01/.02 ²¹⁾	Impeller wear ring
320.02 ²⁴⁾	320.02	Angular contact ball bearing (double-row in CS40)
321.01 ²⁶⁾	321.01	Deep groove ball bearing
321.02 ²⁶⁾	321.02	Deep groove ball bearing
322.01 ²⁴⁾	322.01	Cylindrical roller bearing
330	330	Bearing bracket
360.01	360.01	Bearing cover
360.02	360.02	Bearing cover
400.01	400.01	Gasket
400.02	400.02	Gasket
411.15 ²²⁾	411.15	Joint ring
411.31	411.31	Joint ring
411.32	411.32	Joint ring
421.01	421.01	Lip seal
421.02	421.02	Lip seal

21) Not on all versions

22) Joint rings 411.10 and 411.15 (411.15 for versions with mechanical seal with seal cover only) depending on the operating temperature. Order separately in spare parts order.

23) Only for clamped cover

24) Not fitted on versions with economy bearings

25) From CS 60

26) On versions with economy bearings only